

Software Update Instructions

Use this procedure to update the receiver's software via a USB memory device and check the version. Updating via a USB memory device is performed by downloading the update file from a computer, reading this file

onto a USB memory device then inserting this USB memory device into the USB port on the receiver's front panel.

With this procedure, the USB memory device containing the update file must first be inserted into the USB port on the receiver's front panel.

Before updating, download an update file onto your computer.

When downloading an update file from the Pioneer website onto your computer, the file will be in ZIP format.

Unzip the ZIP file and save all the unzipped files on the USB memory device.

If there are any old downloaded files or files for other models on the USB memory device, delete them.

Important

- DO NOT unplug the power cord during updating.
- When updating via the Internet, do not disconnect the LAN cable.
- When updating via a USB memory device, do not disconnect the USB memory device.
- If updating via a USB memory device, the setting for Favorite, Account information(SiriusXM/Pandora),
BT pairing and Airjam reset to the factory default after the update.
Write down these settings before the update as they may need to be set up again.

- The latest version is not available via the Internet.

Please use an update file which is downloaded from PIONEER website. And please download via USB memory to
update your receiver to the latest version.

1 Select "Software Update" from the Other Setup menu.

2 Select the update procedure.

- Update via Internet

The receiver checks whether updatable software is available via the Internet.

- Update via USB Memory

The receiver checks whether the USB memory device inserted into the USB port on the receiver's front panel

contains updatable software.

"Accessing" is displayed and the update file is checked. Wait a while.

3 Check on the screen whether or not an update file was found.

If "New version found." is displayed, the update file has been found and the version number and updating time
are displayed.

If "This is the latest version. There is no need to update." is displayed, no update file has been found.

4 To update, select OK.

The updating screen appears and updating is performed.

The power turns off automatically once updating is completed.