

Software Update Instructions

Use this procedure to update the receiver's software and check the version.

There are two ways to update: via the Internet and via a USB memory device.

Updating via the Internet is performed by accessing the file server from the receiver and downloading the file.

This procedure is only possible if the receiver is connected to the Internet.

Updating via a USB memory device is performed by downloading the update file from a computer, reading this file

onto a USB memory device then inserting this USB memory device into the USB port on the receiver's front panel.

With this procedure, the USB memory device containing the update file must first be inserted into the USB port

on the receiver's front panel.

Before updating, download an update file onto your computer.

When downloading an update file from the Pioneer website onto your computer, the file will be in ZIP format.

Unzip the ZIP file and save all the unzipped files on the USB memory device.

If there are any old downloaded files or files for other models on the USB memory device, delete them.

Important

- DO NOT unplug the power cord during updating.
- When updating via the Internet, do not disconnect the LAN cable.
- When updating via a USB memory device, do not disconnect the USB memory device.
- If updating is interrupted before it is completed, start updating over from the beginning.

1 Press MAIN RECEIVER to switch the remote control to the receiver operation mode, and then press HOME MENU.

2 Select "System Setup" from the HOME MENU.

3 Select "Other Setup" from the Other Setup menu.

4 Select "Software Update" from the System Setup menu.

5 Select the update procedure.

- Update via Internet

The receiver checks whether updatable software is available via the Internet.

- Update via USB Memory

The receiver checks whether the USB memory device inserted into the USB port on the receiver's front panel

contains updatable software.

"Accessing" is displayed and the update file is checked. Wait a while.

6 Check on the screen whether or not an update file was found.

If "New version found." is displayed, the update file has been found and the version number and updating time

are displayed.

If "This is the latest version. There is no need to update." is displayed, no update file has been found.

7 To update, select OK.

The updating screen appears and updating is performed.

The power turns off automatically once updating is completed.

If UPDATE ERROR 7 is displayed, please turn off and on the power of receiver, and retry to update via a USB memory device.

If UPDATE ERROR 1-6 is displayed, please re-connect USB memory, turn off and on the power of receiver,

and retry to update.

Further, if update cannot be done successfully though you retry, please change USB memory to the other one.

If other errors are displayed, please refer to the "Software Update" in the CD-ROM's Operating Instructions.